## 30-4402 TEMPERATURE GAUGE QUICK START GUIDE



## **DIGITAL DISPLAY GAUGE**

The AEM Digital Display Gauges are designed for easy installation and usability. The 30-4402 Temperature Gauge kit comes with all the necessary components to install and use the gauge. Follow the instructions printed in this quick start sheet to install your gauge and start using it as soon as possible. Visit the "AEM Gauges" section of the AEM electronics forum for more information on the advanced features of this gauge. The forums can be accessed by clicking on the "FORUMS" link on the AEM home page, www.aempower.com.

**Gauge Configuration:** The gauge bezels are threaded on to the gauge cup. Rotate the bezel in a counter-clockwise direction to remove it from the cup. Once removed, the faceplate can be changed and/or a different bezel can be installed.

**Electrical Connection:** In order to use the gauge, only the red and black wires need to be connected. The white and blue wires do not need to be connected. Connect the red wire to switched +12V. Connect the black wire to a known good ground. Plug the connector on the harness into the mating connector on the sensor. See the connection diagram below.

**Sensor Installation:** The AEM Temperature sensor has 1/8"NPT external threads. When possible, install the sensor into a bung with mating threads. If a 1/8"NPT bung is not available, install one of the provided NPT adapters into the bung, then install the sensor into the adapter.

The 30-4402 Kit Contains:

- (1) Temperature Gauge assembly
- (1) Temperature Sensor
- (1) Temperature Cable
- (4) Butt Connector
- (1) Silver Bezel
- (1) White Oil Temperature Faceplate
- (1) Black Water Temperature Faceplate
- (1) White Water Temperature Faceplate
- (1) Black Trans Temperature Faceplate
- (1) White Trans Temperature Faceplate
- (1) 1/4" NPT to 1/8" NPT adapter
- (1) 3/8" NPT to 1/8" NPT adapter
- (1) Instructions

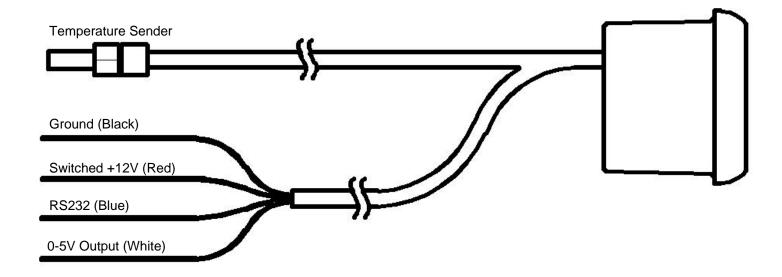


Figure 1. Connection Diagram

## **AEM Electronics Warranty**

Advanced Engine Management Inc. warrants to the consumer that all AEM Electronics products will be free from defects in material and workmanship for a period of twelve months from date of the original purchase. Products that fail within this 12-month warranty period will be repaired or replaced when determined by AEM that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12-month warranty period. Improper use or installation, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Merchandise Authorization (RMA) number. Product must be received by AEM within 30 days of the date the RMA is issued.

Please note that before AEM can issue an RMA for any electronic product, it is first necessary for the installer or end user to contact the tech line at 1-800-423-0046 to discuss the problem. Most issues can be resolved over the phone. Under no circumstances should a system be returned or a RMA requested before the above process transpires.

AEM will not be responsible for electronic products that are installed incorrectly, installed in a non approved application, misused, or tampered with.

Any AEM electronics product can be returned for repair if it is out of the warranty period. There is a minimum charge of \$50.00 for inspection and diagnosis of AEM electronic parts. Parts used in the repair of AEM electronic components will be extra. AEM will provide an estimate of repairs and receive written or electronic authorization before repairs are made to the product.