



## COBB SS Heat Shield Installation Instructions



Congratulations on your purchase of the COBB Tuning Heat Shield. The following instructions should assist you through your installation process. Please read them first before beginning the install. If you feel that you cannot properly perform this installation, we HIGHLY recommend you take the vehicle to a qualified mechanic.




### **TOOLS NEEDED**

- 10mm Socket
- Socket wrench (We recommend 3/8" drive)
- 10mm Open/boxed Socket Wrench



## 1 REMOVAL OF STOCK HEAT SHIELD

Remove the 7 bolts holding the factory heat shield to the downpipe and up-pipe brackets. Make sure to leave the bracket that hold the heat shield to the downpipe in place. This will be retained for the installation of the COBB Heat Shield.

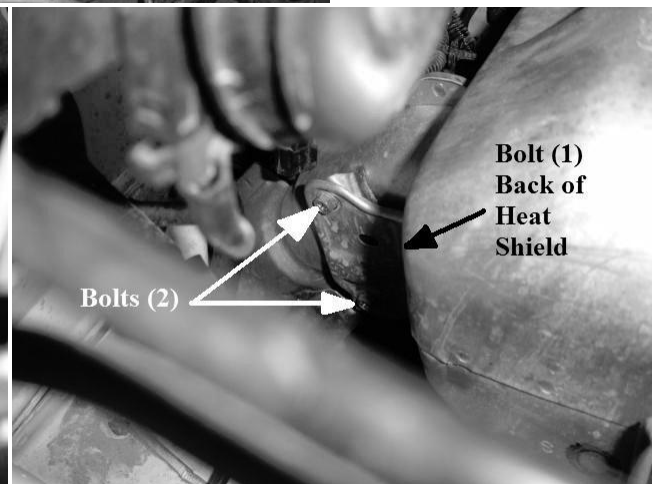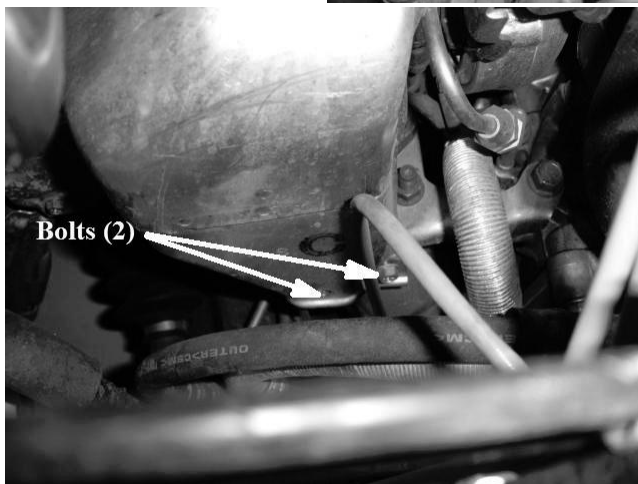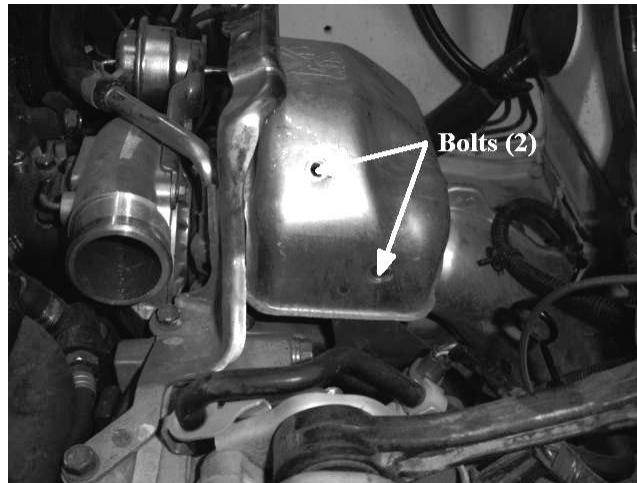



## 2 INSTALLATION OF COBB HEAT SHIELD

Install the COBB Heat Shield using the 3 factory locations on the up-pipe and downpipe brackets shown below. It is slightly easier to install the up-pipe location first as it is the hardest to get to. Due to the fact that there is variance in each car as well as each heat shield, it may take slight work to get all 3 holes to line-up.

