Installation Guide

Z 5068

Differential Positive Power Kit

Suits: Nissan 350Z G35 '03 on

(Always refer to the current catalogue for complete application listings)

N.B: These instructions should be used in conjuction with the workshop manual

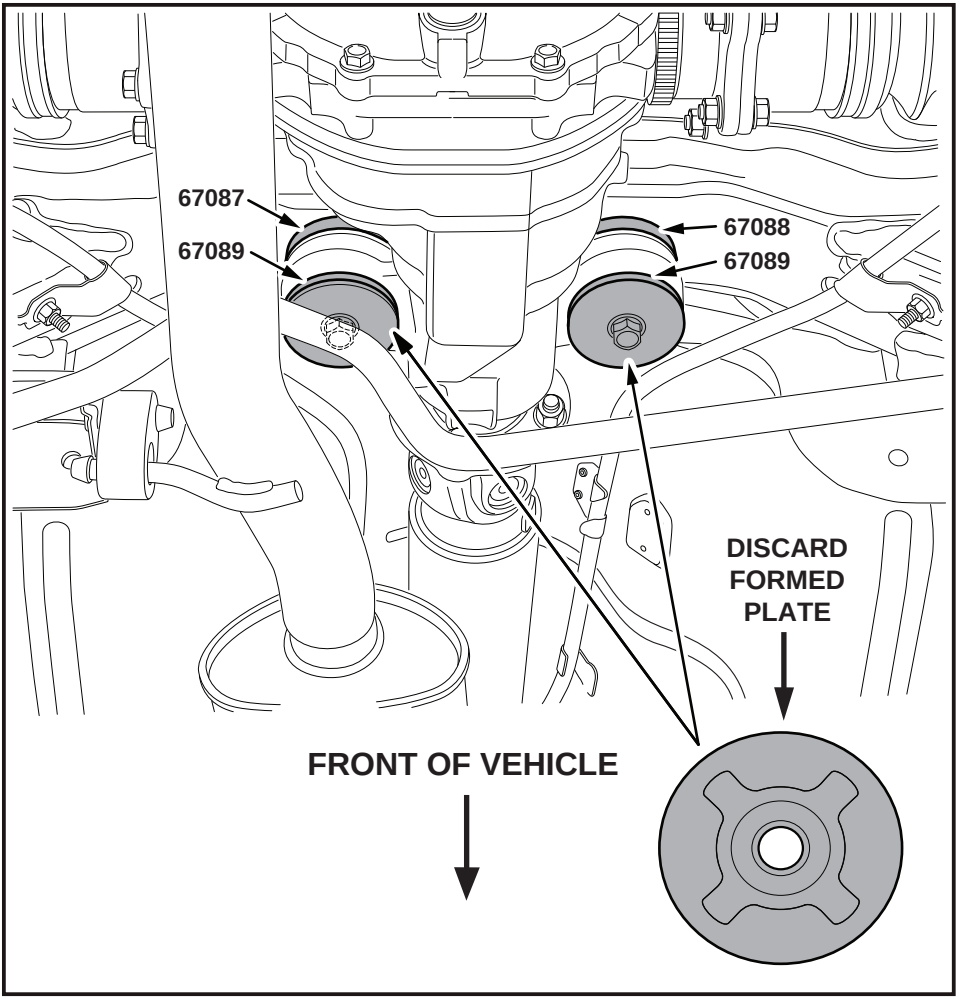

NOTE: REMOVE FORMED PLATE (REFER DIAGRAM) FROM UNDER LARGE WASHERS INDICATED AND DISCARD.

NOTE: RE-USE LARGE FLAT WASHERS.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Copyright ABN 99 124 177 297